



ARP 553254N 0132112E

AD ELEV 236 FEET

LEGEND See GEN 2.3

Dimensions in m, ELEV in ft

Docking system type Stands Number

Safegate 20
APIS 1- 8

Parking procedures

Unless otherwise requested aircraft will normally be guided to nose-in parking. Pilot in command must ensure that towbar for push-back is available before accepting this parking procedure.

At parking stand No 1-8

Centre line and stopping guidance are provided from a display unit mounted at the extension of the stand centre line.

1. Intercept the centre line and follow the azimuth guidance display.
2. Check correct aircraft type/series on the APIS display.
3. Abort docking if display shows STOP or wrong aircraft type/series.
4. At STOP position the red lights are lit and display indicates STOP, and the centre line beacon is switched off.
5. If correctly parked « OK » shows on the display.
If coming to far the display indicates « TOO FAR ». The safety area is passed and push-back may be necessary.

INS Coordinates for Aircraft Stands			
APRON Surface Bearing strength	NR	COORD	ELEV
N CONC+ASPH PCN 80 F/B/X/T	A	5532.5N 01322.0E	222
	B	5532.5N 01322.1E	222(*)
	C	5532.4N 01322.0E	223
S CONC+ASPH PCN 80 F/B/X/T	D	5532.4N 01322.0E	222
	E	5532.4N 01322.1E	224
	F	5532.3N 01322.0E	223(*)
	G	5532.3N 01322.1E	223
HA ASPH	H	5532.0N 01322.3E	223
	I	5532.1N 01322.2E	232
HB ASPH			
JA ASPH			
JB ASPH			